

AC & DC Power Distribution Panel

PN 8085/PN 3085/PN 8185/PN 3185

Panel Specifications

Material:	0.125" 5052-H32 Aluminum Alloy	
Primary Finish:	Chemical Treatment per Mil Spec C-5541C	
Final Panel Finish:	Graphite color 2 part textured Polyurethane	
Amperage Rating:	All components are sized for 100 Amps of continuous current	
Voltage Rating:	8085	12 Volts DC* / 120 Volts AC
	8185	12 Volts DC* / 230 Volts AC
	* Panels can be upgraded to 24 volts with PN 8240, 18-32V DC voltmeter.	
	Inches	Millimeters
Overall Dimensions:	14-3/4 x 10	374.70 x 254.00

Panel Features

- Set of 30 common AC and 30 common DC labels, Backlightable
- AC 8085 / 3085 / 8185 / 3185
- Sixteen AC circuit breaker positions
 - 0-50 Ampere AC ammeter with remote sensing coil
- DC 8085 / 3085 / 8185 / 3185
- One 100 Ampere C-Series DC main circuit breaker
 - Eight DC circuit breaker positions, Four 15A circuit breakers installed
 - 8-16 Volt voltmeter with 3 position switch for multiple battery banks
 - All positive, ground and grounding buses installed, fully pre-wired.
- AC 8085 / 3085
- Nine 15 Ampere branch circuit breakers installed
 - Two double-pole 30 Ampere AC main circuit breakers with lockout slide
- AC 8185 / 3185
- Nine 8 Ampere branch circuit breakers installed
 - Two double-pole 16 Ampere AC main circuit breakers with lockout slide
 - 0-250 Volt AC voltmeter



WARNING

- ✓ It is not possible within the scope of these instructions to fully acquaint the installer with all the knowledge of electrical systems that may be necessary to correctly install this product. If the installer is not knowledgeable in electrical systems we recommend that an electrical professional be retained to make the installation.
- ✓ If either the panel front or back is to be exposed to water it must be protected with a waterproof shield.
- ✓ The panels must not be installed in explosive environments such as gas engine rooms or battery compartments as the circuit breakers are not ignition proof.
- ✓ The main positive connection must be disconnected at the battery post to avoid the possibility of a short circuit during the installation of this distribution panel.

Questions and Comments

We invite your questions and comments. You may contact us at the address below or by email at conduct@blueseas.com. To find out more about our full line of marine electrical products visit our web site at www.blueseas.com.

Blue Sea Systems Inc.
425 Sequoia Drive
Bellingham, WA 98226 USA

Phone (360) 738-8230
Fax (360) 734-4195
E-mail conductor@blueseas.com
www.blueseas.com

Installation Set Up

1. Disconnect all AC and DC power

Disconnect all AC power originating on or off the vessel. This includes inverters, generators, shore power attachments and any other device capable of supplying AC power to the ship's circuits.

Disconnect the main positive DC cable from all batteries to eliminate the possibility of a short circuit and to disable the inverter while installing the distribution panel.

2. Select mounting location and cut opening

If this panel is to serve as your main shore power disconnect circuit breaker, select a location which is not more than 10 feet from the shore power inlet or the electrical attachment point of a permanently installed shore power cord as measured along the conductors of the feed wires. If it is more than 10 feet additional fuses or circuit breakers must be installed within 10 feet of the shore power inlet.

Select a mounting location which is protected from water on the panel front and back and is not in an area where flammable vapors from propane, gas or lead acid batteries accumulate. The circuit breakers used in marine electrical panels are not ignition protected and may ignite such vapors.

Using the panel template provided, make a cutout in the mounting surface where the distribution panel is to be mounted. Do not yet fasten the panel to the mounting surface.

DC Installation

1. Select positive feed wire and negative return

Determine the positive feed (red) and negative return (black or yellow) wire size by calculating the total amperage of the circuits that will be routed through the panel. Blue Sea Systems' electrical panels are rated at 100 amp total capacity. The positive feed wire must be sized for 3% voltage drop at the 100 amp panel rating or the maximum amperage that will be routed through the panel in any particular installation, which ever is less. It is recommended that the positive feed wire be sized for the full panel capacity, which, in most cases, will require at least 2 AWG wire, assuming a 10 foot wire run between the panel and the batteries in 12 volt systems. Refer to the Wire Sizing Chart for other situations. In the case of panels with two or more columns of breakers, jumpers from positive bus to positive bus and from negative bus to negative bus should be the same size as the positive feed and the negative return wires.

Remember that the length of the circuit is the total of the positive wire from the power source and the negative wire back to the DC Negative Bus. Be certain that there is a fuse or circuit breaker of the correct size protecting the positive feed wire.

2. Install battery bank voltage monitor wires

The panel is supplied with a digital meter and switch to monitor the voltage of three separate sources, usually the batteries. Connect a minimum 16 AWG red wire from each source to be monitored to each of the corresponding input wires of the switch. There should be a 1 ampere fuse in each positive wire near each source.

DC Installation (continued)

3. Install branch circuit wires

Determine the proper wire size for each branch circuit using the guidelines in step 4. Verify that the standard 15 amp circuit breakers installed in the panel are large enough for each branch circuit. Remove and replace with a higher amperage any that are undersized. Connect the positive (red) branch circuit wires to the load terminals of each circuit breaker. Connect each negative (black) branch circuit wire to the DC Negative Bus. **DO NOT CONFUSE THE DC NEGATIVE BUS WITH THE DC GROUNDING BUS.**

4. Optional - install grounding system wire

The grounding wire (bare, green or green with yellow stripe and normally non-current carrying) should not be confused with the negative ground wire (black or yellow and normally current carrying).

In *Boatowner's Illustrated Handbook of Wiring*, Charlie Wing identifies three purposes of DC Grounding:

1. Holding conductive housings of low voltage (under 50 volts) DC devices at ground potential by providing a low resistance return path for currents accidentally contacting the device cases.
2. Providing a low resistance return path for electrical current, preventing stray currents that may cause corrosion.
3. Grounding metal electrical cases to prevent emission from inside or absorption from outside of radio frequency noise (RFI).

ABYC requires that grounding wires be sized no smaller than one wire size under that required for current carrying conductors supplying the device to which the grounding wire is connected.

5. Installation of Backlight System

Connect the yellow negative wire to the panel negative bus. **Do not confuse with the AC neutral bus.**

To activate the label lights by the boat's battery switch, connect the red positive wire to the DC positive bus. **Do not confuse with the AC hot bus.**

To activate the label lights by an independent switch or breaker, connect the red positive wire to the load side of a DC switch or breaker.

6. Optional Branch LEDs

This panel is supplied with LED's pre-installed in all optional branch positions. For future expansion of the panel remove the positive leg of the LED from the negative bus and connect it to the load side of the corresponding branch circuit breaker.

Note

All Blue Sea Systems' DC electrical distribution panels are furnished with 15 amp AC/DC circuit breakers. This rating was selected to minimize the need for removing the panel's circuit breakers and reinstalling different size circuit breakers. As shown in the Wire Sizing Chart included with these instructions, even 16 AWG wire, which is the minimum wire size recommended by ABYC, has an allowable amperage greater than 20 amps. Additionally, it would be rare to have more than 15 amps of current flowing in any one circuit. Therefore, 15 amp circuit breakers will satisfy the vast majority of marine circuit protection situations.

AC Installation

1. Install branch circuit wires

Determine the proper wire size for each branch circuit using the chart below. Verify that the standard circuit breakers installed in the panel are correct for each branch circuit. Remove and replace any that are incorrectly sized. The circuit breaker must have a rating less than the allowable amperage of the wire, yet greater than the circuit's continuous current.

Connect each branch circuit hot (black) to the appropriate load terminal. Connect each branch circuit neutral (white) to one of the screws on the neutral bus. Connect each branch safety ground wire (green) to one of the screws of the safety ground bus.

Do not confuse the neutral current carrying wires (sometimes called ground) with the green normally non-current carrying wires (sometimes called grounding). These two wires must be connected only at the source of power, nowhere else.

Wire sizing chart

Use the wire sizing chart below to determine the minimum branch and feed circuit wire sizes.

Allowable Amperage of Conductors

Wire Size (AWG)	Outside Engine Spaces	Inside Engine Spaces
16	25.0	21.3
14	35.0	29.8
12	45.0	38.3
10	60.0	51.0
8	80.0	68.0
6	120.0	102.0
4	160.0	136.0
2	210.0	178.5

Note: This chart assumes wire with 105°C insulation rating and no more than 2 conductors are bundled.
Not suitable for sizing flexible shore power cords.

2. Install feed circuit wires

Install the feed wires from the shore power inlet or other AC source, referring to the wire sizing chart to select the correct wire size. Connect the black AC hot, white AC neutral and green AC safety ground as shown in the illustration.

If the feed wires are from the shore power inlet or the electrical attachment point of a permanently installed shore power cord and the inlet or attachment point is more than 10 feet from this panel, an additional fuses or circuit breakers must be installed within 10 feet of the shore power inlet. The measurement is made along the conductors.

3. Optional Branch LEDs

This Panel is supplied with LED's pre-installed in all optional branch positions. For future expansion of the panel remove the hot leg of the LED from the AC Neutral Bus and connect it to the Load side of the branch circuit breaker.

Note

All Blue Sea Systems' AC electrical distribution panels are furnished with 15 amp or 8 amp circuit breakers for branch circuits. 15 amp circuit breakers are used in all 120 volt panels and 8 amp circuit breakers are used in all 230 volt panels. These ratings were selected to minimize the need for removing the panel's circuit breakers and reinstalling different size circuit breakers. It is very rare to have more than this amount of current flowing in any one circuit. Therefore, these circuit breakers will satisfy the vast majority of marine circuit protection situations.

Panel Mounting and Testing

1. Apply branch circuit labels and mount panel

Apply a label for each of the branch circuits from the 60 basic labels provided. If the appropriate label is not included, AC and DC Extended Label Sets of 120 labels each may be ordered from your marine supplier (PNs 8039 and 8067). Individual labels are also available from Blue Sea Systems for specific applications. Refer to the label order form for a complete listing of individual labels.

Fasten the panel to the mounting surface using the panel mounting screws supplied with the panel.

2. Testing

- ✓ Reconnect the main positive cable to the battery terminals and turn the main switch on to supply power to the panel. Turn on all branch circuits and test the voltage at the panel. Compare this voltage to the battery terminal voltage to determine that the voltage drop is within 3%. With all branch circuits still on, test the voltage at one device on each circuit to determine that there is a 3% or 10% drop as is appropriate.
- ✓ Connect the vessel's shore power and verify the Reverse Polarity light is not illuminated. If the red Reverse Polarity light is on then either the hot and ground or the hot and neutral wires have been crossed. Starting at the panel, trace the connections back as far as necessary to locate the error.

- ✓ Using a multimeter where the power source is connected to the panel verify:

PN 8085 / PN 3085-120 Volt AC

- a. 120 volts between hot and neutral (nominal, this may vary depending on source voltage)
- b. 120 volts between hot and ground.
- c. 0 volts between neutral and ground

PN 8185 / PN 3185-230 Volt AC

- a. 230 volts between hot and neutral (nominal, this may vary depending on source voltage)
- b. 230 volts between hot and ground.
- c. 0 volts between neutral and ground.

- ✓ Turn on each branch circuit to verify power to each circuit.

Reference

Applicable Standards

- American Boat and Yacht Council (ABYC) Standards and Recommended Practices for Small Craft sections: E-1, E-3, E-9.
- United States Coast Guard 33 CFR Sub Part 1, Electrical Systems

The Purpose of a Panel

There are six purposes of a marine electrical panel:

- Power distribution
- Circuit (wire) protection
- Circuit ON/OFF switching
- Reverse Polarity Indication
- Metering of voltage and amperage (In panels with meters)
- Condition Indication (circuit energized)

Useful Reference Books


- Calder, Nigel, 1996: *Boatowner's Mechanical and Electrical Manual*, 2nd edition, Blue Ridge Summit, PA: TAB Books, Inc.
- Wing, Charlie, 1993: *Boatowner's Illustrated Handbook of Wiring*, Blue Ridge Summit, PA: TAB Books, Inc.

Guarantee

Any Blue Sea Systems product with which a customer is not satisfied may be returned for a refund or replacement at any time. Reference Blue Sea Systems' Digital Meter installation manual for specific meter warranty information.

Related Products from Blue Sea Systems

High Amperage Fuses and Circuit Breakers for positive feed wires
High Amperage Battery Switches
Terminal Blocks and Common Bus Connectors
AC and DC Voltmeters and Ammeters

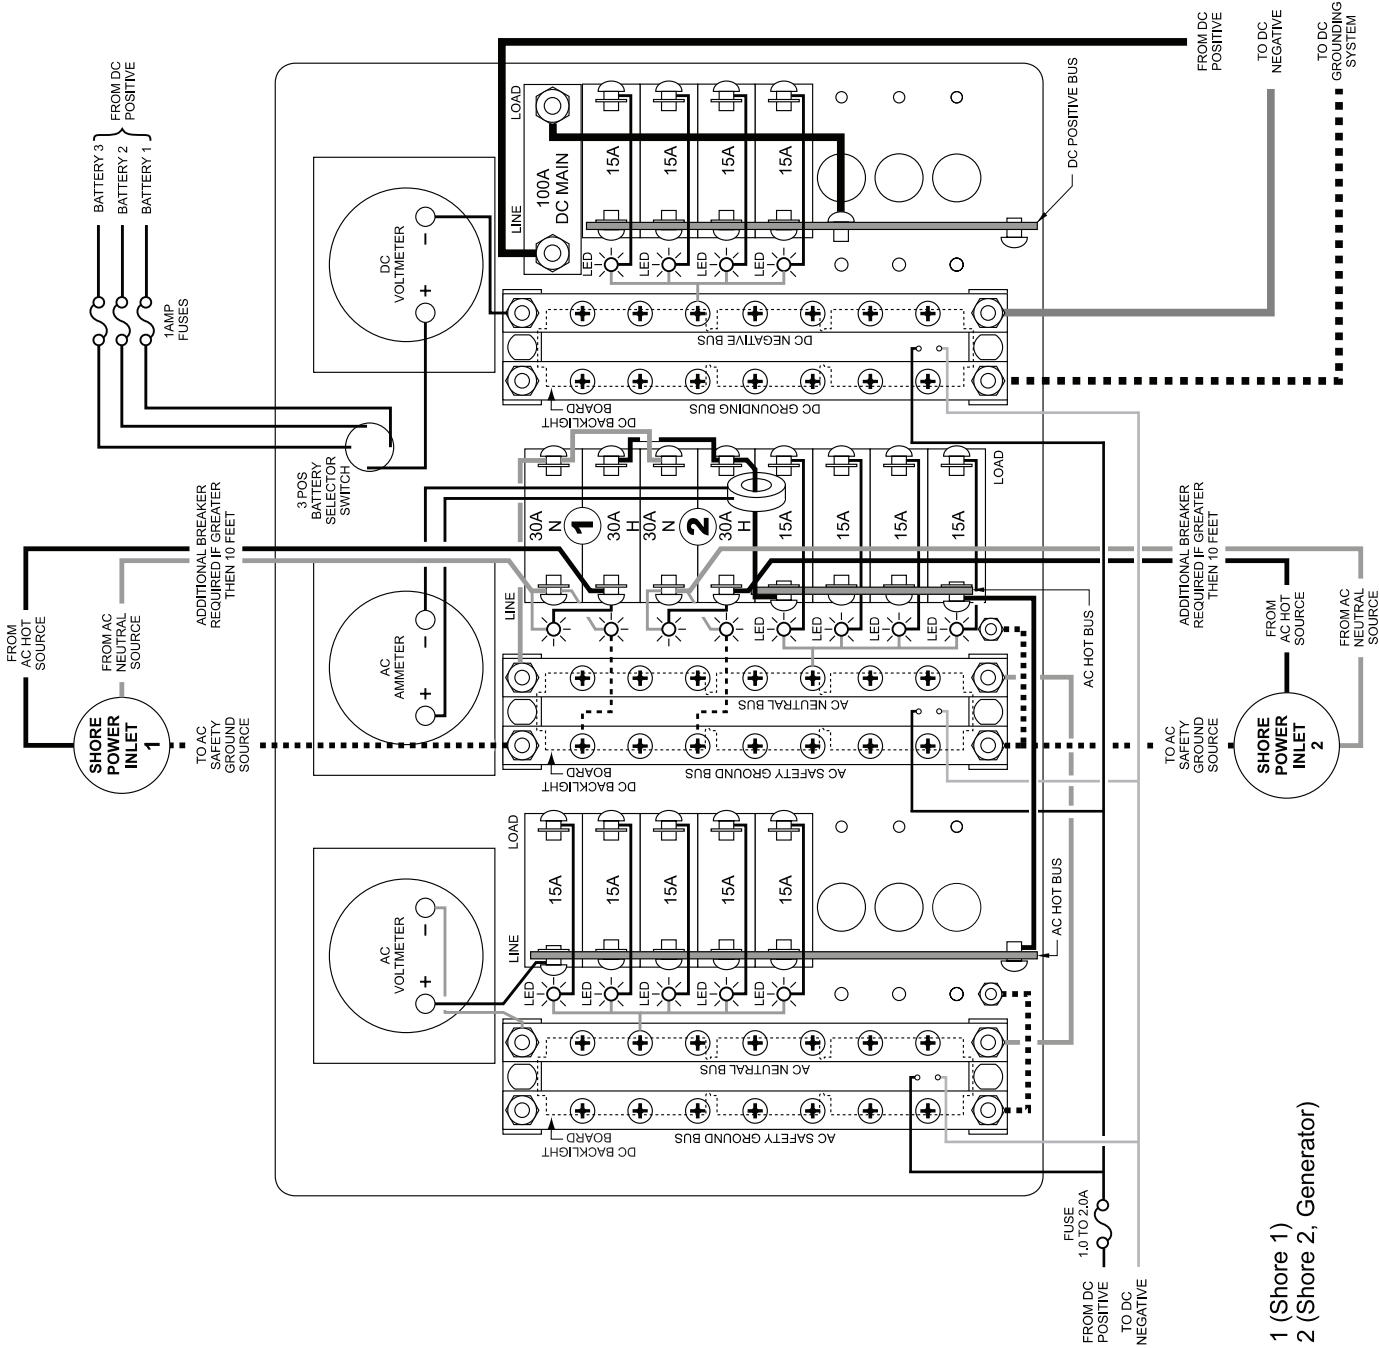

1 = AC Source 1 (Shore 1)
 2 = AC Source 2 (Shore 2, Generator)

Wiring Diagram
 AC/DC Power Distribution Panel
 PN 8085 / PN 3085

BLUE SEA
S Y S T E M S
 425 Sequoia Drive
 Bellingham, WA 98226
 Phone (360)738-8230 Fax (360)734-4195